




# A GUIDE TO USING ADHESIVE MATTING

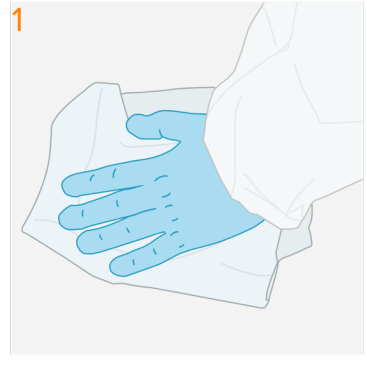


**1**  
Before placing the mat down you must wipe the area, leaving enough time for the surface to dry

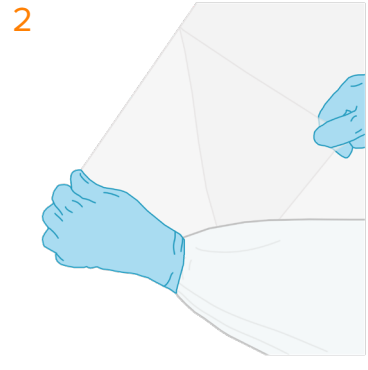

**2**  
Remove a set of mats from the box and peel off the bottom adhesive layer (always make sure boxes are stored flat)

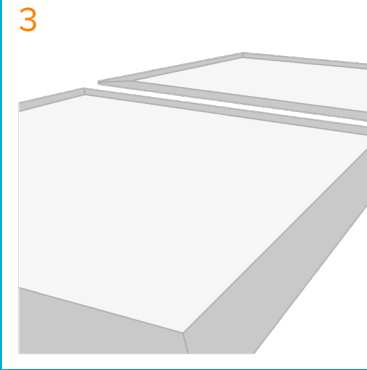


**3**  
Ensure mats are placed with enough space for users to take three steps before entering the gowning area

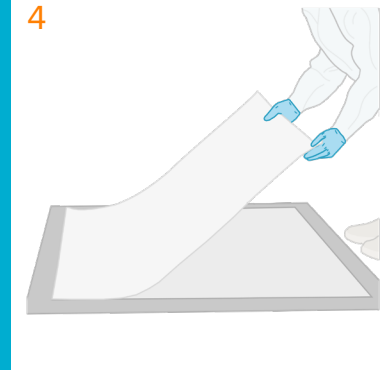

**4**  
Flip the mat over, gradually sticking the adhesive mat to the prepared surface



**5**  
Ensure all air bubbles are removed by applying weight to the mat, securing it to the floor

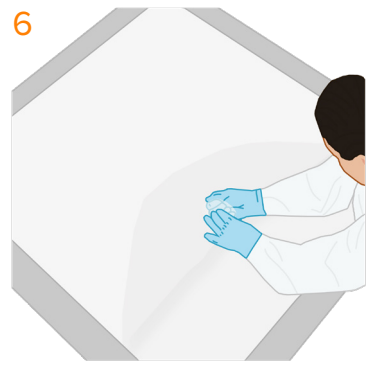

**6**  
Once on the ground, pull off the first adhesive layer. Peel the layer back into a ball to reduce static charge



**7**  
Now you can use the mat. Make sure to take a minimum of three steps to ensure full contamination control



**8**  
When dirty, remove the top adhesive layer. Each layer is numbered to indicate remaining number of adhesive layers